

MODEM INT(RS232 Only): Tests Modem Interrupt occurrence.

LINE INT(RS232 Only): Tests Line Interrupt occurrence.

3. How to use

Sbtest1050 tests the multiport for local loopback, external loopback and interrupts for each port. When the test succeeds the program shows a yellow “.” and when the test fails it shows a black “x”. The columns show serial port numbers and the rows show the test items. For instance, if you the yellow dot in the red circle means that Uart Local Loopback test succeeded for port 3. The X in the green circle means that Transmit Interrupt test failed in port 7.

INTERFACE PORT			[1]RS232 1234 5678				
UART LOCAL LOOPBACK			XXXX
RS232	RS422	RS485					
TX – RX	TX – RX	1 – 2	XXXX
RT – CT		3 – 4	XXXX
RT – DC		5 – 6	XXXX
DT – DS		7 – 8	XXXX
TX INT			XXXX
RX INT			XXXX
MODEM INT			XXXX
LINE INT			XXXX

4. Setup

Press F2 for setup. Baud Rate can be changed.