

5G CPE

Quick Installation Manual



Please be sure to read the manual carefully before installation, and the factory is not responsible for any product damage caused by illegal operation in accordance with the manual.

Packing List

- 5G CPE × 1
- Power Adapter × 1
- Quick Manual × 1



Thank you for buying 5G CPE products, which will bring you a new experience of surfing the Internet. Through the installation Manual, we hope you can set up 5G CPE correctly, learn how to better connect 5G network of operators and WiFi hotspots of routers. Enjoy high-speed Internet access.

5. Connection 5G CPE

1. Computer and mobile phone wireless connection
Make sure WiFi indicator is always on, search default WiFi hotspot to connect

Hotspot Name: 5G_CPE
Hotspot Password: 123456789

2. Wired connect of computer
Plug network cable into any LAN port of 5G CPE and the other into wired network port of the computer, ensure network card of computer works in the state of "automatic acquisition of IP address"
When mobile phone or computer connected to CPE, access the CPE local management web page for configuration management enter in the browser islogin.com for the first time use, please set it according to the installation wizard.

Staus Light

Power Light

LED	Status	Description
●	Blue Light	Power Supply On
●	Grey	Power Supply Off

Breathing Light

LED	Status	Description
●	Blue Breathing	Connection Succeed
●	Red Breathing	Connection Failed
●	Blue Flash fast*	Pairing

*Mesh function software supported

WiFi Indicator

LED	Status	Description
●	Blue light	WiFi On
●	Grey	WiFi Off

Interface



- ① 5G Signal Light
- ② 4G Signal Light
- ③ WiFi Signal Light
- ④ Mesh Button
- ⑤ Power Indicate Light
- (一) Breathing Light
- (二) 1G LAN
- (三) 1G LAN
- (四) 2.5G WAN
- (五) DC12V Power
- (A) Reset
- (B) Card

1.Preparation

- Attention:
- 1.Place 5G CPE according to base station signal position of the operator to ensure good 5G signal quality, such as indoor window sill
 2. Ensure 5G CPE at least 3M away from strong EMI sources, such as microwave oven, fridge, etc
 - 3.Place 5G CPE on plane and fixed, no obvious shelter beside it.

2.Insert SIM Card

- 1.5G CPE bottom up, pull out SIM card rubber cover
- 2.SIM insert card slot(direction as marked on rubber cover), push in
- 3.Close rubber cover, put 5G CPE on flat, make sure SIM card 5G in service

3.Connect Power

Insert one side the power adapter into the socket, another side into 5G CPE power interface. Wait for 2-3 seconds, the power indicator lights up, indicated device powered on normally.
Note: make sure to use the correct power adaptor to avoid damaging the equipment

4.Start Configuration

Be sure to read the installation instructions in the quick installation manual carefully
5G CPE need to wait 1-2 minutes after connecting the power adapter When 5G CPE signal indicator is blue, means 5G signal good. Please observe the status of the indicator and adjust the position properly

FAQ

Q:Power Adapter doesn't work

A:Check power cord connected correctly

Q:Unable to search or connect to WiFi hotspots

A: Confirm WiFi indicator is always on in blue, or default configuration may be modified. Try to press the reset button for 10 seconds to restore the factory configuration

Q:5G signal indicator does not work

A:Maybe 5G network is not covered here or the software function is not turned on Please confirm with your network operator

Q:5G signal indicator is on, but can't access Internet

A: Please confirm whether your network operator has provided "APN" private network service or whether your SIM card is in arrears

5G Signal Light

LED	Status	Description
●	Blue Light	Signal Strong
●	Orange light	Signal Weak
●	Grey	No Signal or Off

4G Signal Light

LED	Status	Description
●	Blue Light	Signal Strong
●	Orange Light	Signal Weak
●	Grey	No Signal or Off